

Ruger 10/22 Extractor Installation Instructions

V1.0

www.tandemkross.com

For more info or support contact CustomerService@tandemkross.com

Attention: Before you begin, be certain that the firearm is safe.

Always wear eye protection when working on firearm parts.

Tools you will need:

- A sharp awl, small flathead screwdriver, dental pick, or similar to assist with alignment of springs and parts.
- Optional: a small magnet.

Step1: Remove the bolt from the rifle. The extractor is found along the right hand side of the bolt.

Step 2: Using a small screwdriver or awl, press the plunger toward the back of the bolt past the round hole. The extractor will easily drop out of the bolt or utilizing a magnet can be lifted out of the slot. Remove the plunger from the hole and replace the spring with the included spring. Reinstall the plunger and spring into the bolt.



Step 3: Install the new extractor by pressing the plunger toward the back of the bolt past the round hole and installing the extractor in the slot. The extractor is held in with pressure from the plunger. The square tab goes into the bolt.



Step 4: Release the plunger with the new extractor in place and the pressure from the spring will self align the new extractor with a snap.