



www.tandemkross.com

For more info or support contact <a href="mailto:CustomerService@tandemkross.com">CustomerService@tandemkross.com</a>



## Attention:

Before you begin, be certain that the firearm is clear and safe.

Step 1: Lock the slide back in the open position. This allows easy access for attaching the charging ring to the slide.



Step 2: Slide the Halo charging ring onto the back of the slide. This is often easier from the bottom of the slide up toward the top. The large curved edge of the charging ring faces down. The Tandemkross logo is upright.





Step 3: Install and tighten the included 5-40 7/8" socket cap screw. Do not overtighten the screw. The charging ring grips tightly to the bolt. Some blue loctite is recommended to keep it from working loose during operation.

**ATTENTION:** If the screw does not tighten down and feels like it is bottoming out in the halo before it tightens all the way remove the bolt and clean out the threads by tapping the halo on a firm surface. If this does not resolve the problem, you can shorten the bolt or contact TANDEMKROSS for a replacement.

When properly installed, the Halo can remain on the slide when field stripped.



