



Fiber Optic Front Sight for Ruger® PC Carbine™  
Installation Instructions  
V1.0

[www.tandemkross.com](http://www.tandemkross.com)

For more info or support contact [CustomerService@tandemkross.com](mailto:CustomerService@tandemkross.com)

---

**Attention:**

**Before you begin, be certain that the magazine is removed and the chamber is clear.**

---

*Tools needed: T10 Torx wrench, medium strength thread locker*

---

It is not required, but it will be easier to perform the installation if the barrel and fore-end of the rifle are separated.




---

Use a long T10 Torx wrench to remove the two screws that hold the front sight and then remove the sight from the barrel.



---

Apply medium strength thread locker (such as blue Loctite) to one of the T10 Torx screws and place it in the hole of the new fiber optic sight.

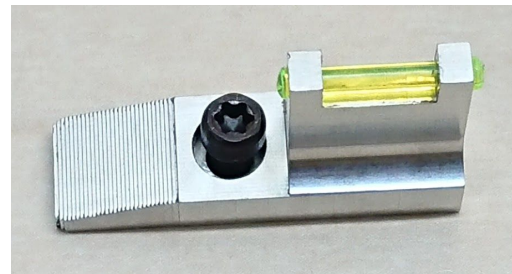

---

Place the front sight onto the barrel and thread the screw into the hole farthest from the muzzle. Tighten the screw making sure that the sight is aligned with the barrel.



---

After installation and test firing, check to be sure that the screw is not loose and tighten if necessary.

Your installation is complete!

Enjoy your new TANDEM KROSS fiber optic sight!

