



Glock "Accelerator" Thumb Rest Installation Instructions

V1.0

www.tandemkross.com

For more info or support contact CustomerService@tandemkross.com

Attention: Before you begin, be certain that the firearm is safe.

Remove the magazine and inspect the chamber making sure that it is empty.


We recommend that if you are not comfortable with disassembly of your gun that you consult a gunsmith.

Follow the disassembly and reassembly instructions in the Glock owners manual to remove/reinstall the slide.


A small punch and a small rubber mallet are recommended tools for installation.

Comes with one Accelerator Thumb rest and one cross pin.


1. Using a punch or a similar tool, remove the top cross pin (highlighted in red) from RIGHT to LEFT.

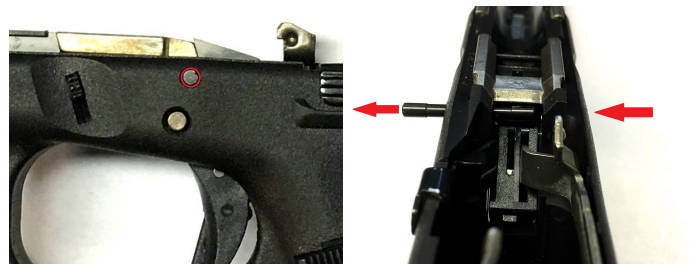

2. Using a punch or similar tool, remove the trigger pin (highlighted in red) from LEFT to RIGHT.

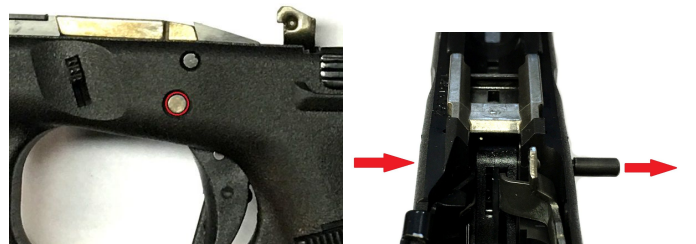

3. Be sure the through holes are aligned before installing the Accelerator from LEFT to Right.

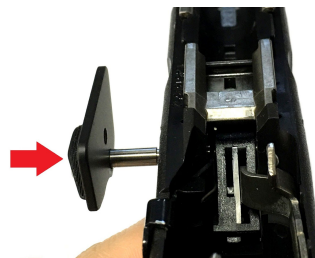

4. Install the Accelerator cross pin from LEFT to RIGHT. Be sure the tension spring for the slide stop plate (highlighted in red) is captured underneath the cross pin.

