



Kel-Tec Sub2000 Rear Sight V2 - Installation Instructions

V1.0

www.tandemkross.com

For more info or support contact info@tandemkross.com

Attention:

Before you begin be certain that the gun is empty and safe. You will need a phillips head screwdriver and possibly a small punch to push out the pin for the factory sight.

There is NO need to take the entire grip apart for this installation. Please ONLY remove the screws indicated in these instructions. If the pin is not moving you may have to use some force to get it started.

** Please note: If the rod is tight in your Sub2k Gen2 some fitting may be required. Using fine sandpaper on the rod is the best method to get it to fit.


In the package you will find the following parts:

The Eagle Eye Sight (Peep or Open)
2 Button Cap screws.
Sight Lever Rod
4-40 3/32" Stainless Steel Set Screw
Allen key for Set Screw



Remove the stock sight from the Sub2000

- Unscrew the phillips head screws on either side of the factory sight.
- Remove the washers and screws and keep these in a safe place. You will need them later.
- Use a punch to move the pin from LEFT to RIGHT. Take care to not damage the threads inside the pin.
- This pin can move difficult at first, but will be easy to move once it is started.
- Remove the factory sight.
- Keep the pin in a safe place as we will need it to insert into the replacement sight.

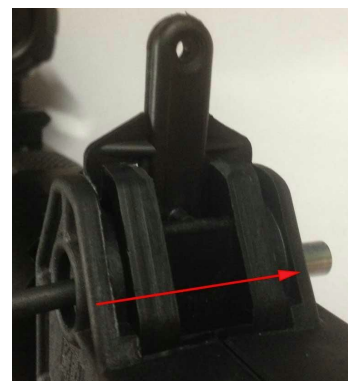

Install the TANDEM KROSS "Eagle Eye"

- Before installing the sight. Install the 4-40 3/32 set screw into the sight. This will make it easier once the sight is installed in the gun. Be sure that the sight lever rod can still slip through the hole in the sight.
- With the set screw facing UP (Not toward the front of the gun) install the Eagle Eye into the opening and insert the sight lever rod from RIGHT TO LEFT through the opening in the sight.
- Install the 2 button cap screws provided into the ends of the sight rod. On the LEFT utilize the washer that was installed from the factory.
- On the RIGHT (Lever Side) use just the screw.
- Tighten these screws so that the lever has enough friction so that the sight will not move upon recoil. *Use a small amount of blue thread locker on non-lever screw to keep it in place.*
- Set the lever in the desired position and tighten the setscrew in the Eagle Eye sight. There is a small amount of windage adjustment available by loosening the set screw and moving the sight right or left and re-tightening.



The TANDEM KROSS sight should move freely up and down with the lever and the sight should remain in the UP position after unfolding the Sub2000. Some added pressure or a rubber washer may be needed on a loose fitting sight. You can adjust the lever to be in any position you choose by loosening the set screw and then adjusting the lever to the desired position.

